

# Instructions on use

266 Quad


More info at [www.crooza.de](http://www.crooza.de)

# Turning on/off



- To turn the Quad on, please make sure that the highlighted switch is in „I“ position.


# Manual Drive

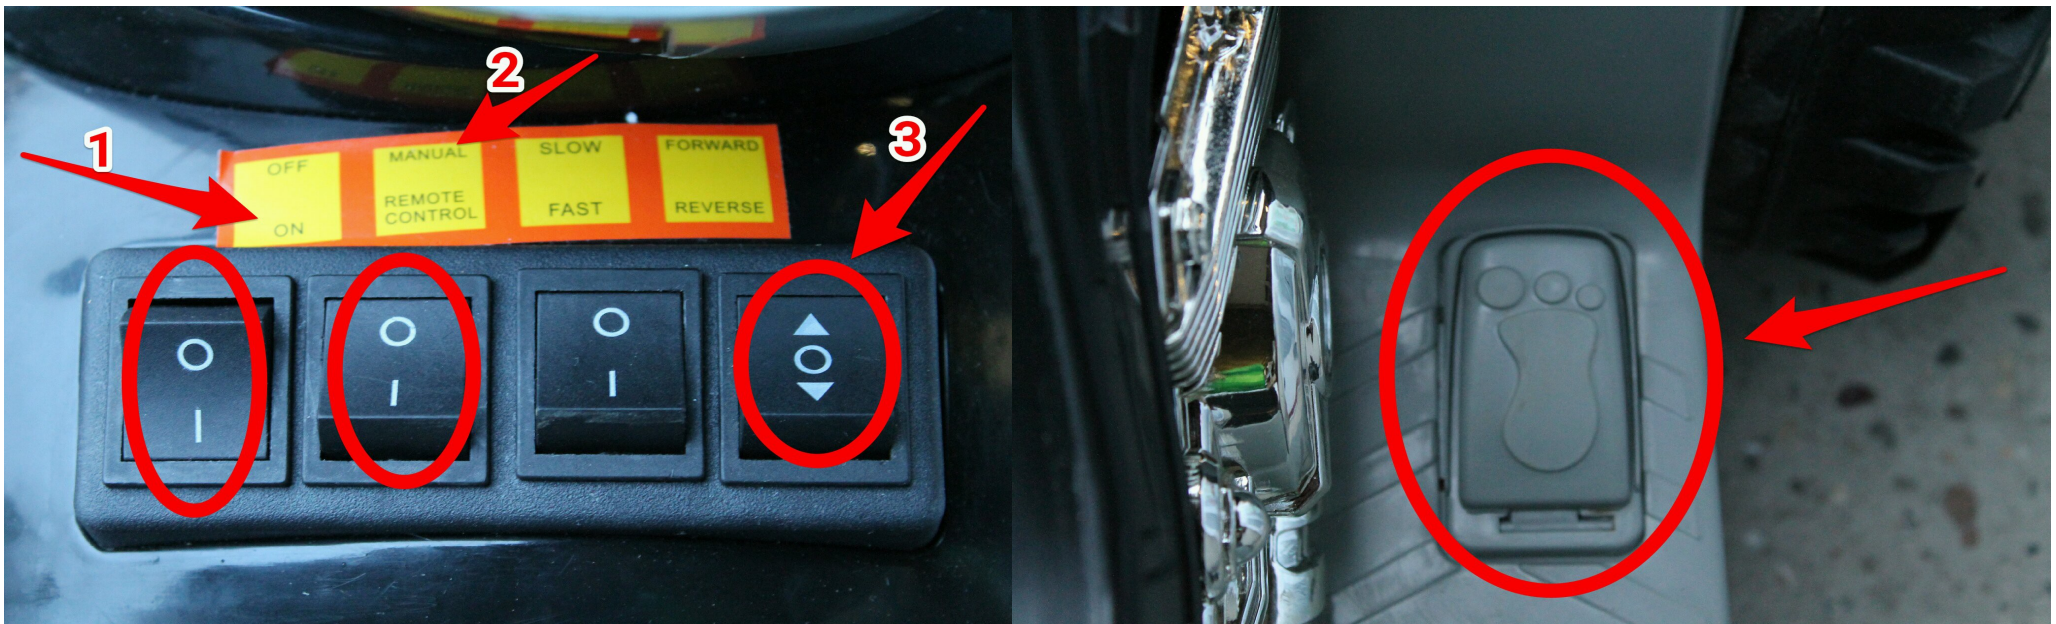

- To drive forward please make sure that Switch 1 is in „I“ position, switch 2 is in „O“ position and Switch 3 is in „▲“ position
- Press the gaspedal (fußpedal) shown




# Manual Drive

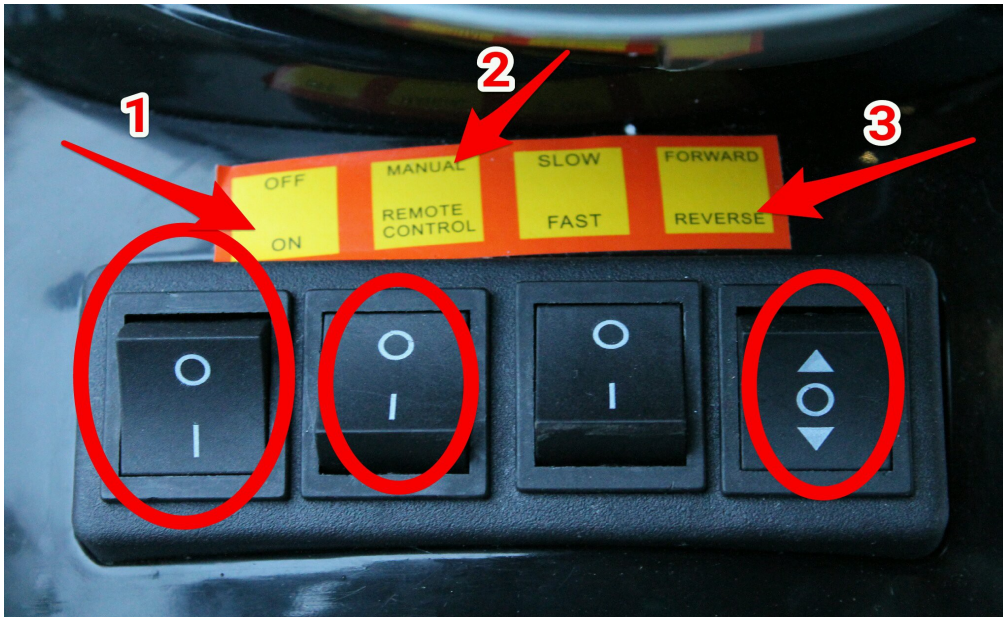

- To drive backwards please make sure that Switch 1 is in „I“ position, switch 2 is in „O“ position and Switch 3 is in „▼“ position
- Press the gaspedal (fußpedal) shown

# Driving with remote control

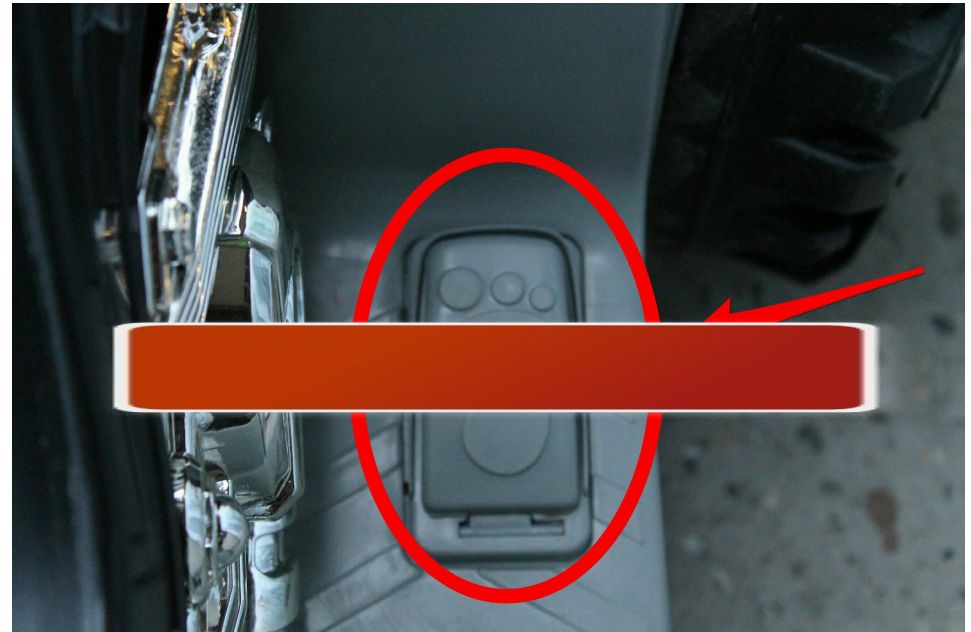

- To drive Quad with remote control, make sure that switch 1 is in „I“ position and switch 2 is also in „I“ position
- The fußpedal will not work when driving with remote control

More info at [www.crooza.de](http://www.crooza.de)




# Driving speed



- To drive faster make sure that the highlighted switch is in „I“ position. To drive slow the highlighted switch must be in „O“ position
- Driving speeds are valid for both manual and remote control
- Proper adult supervision is advised at all times.


More info at [www.crooza.de](http://www.crooza.de)

# charging

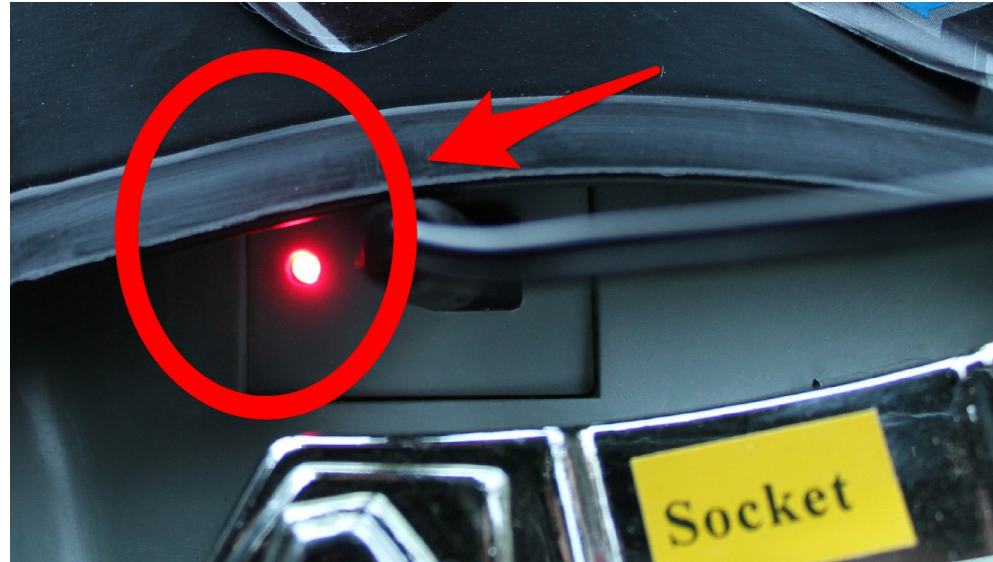

- To charge please make sure that the highlighted switch is in „O“ position
- Insert the stecker in the ladebusche as shown. Make sure that the red LED is turned on

# Horn and music player

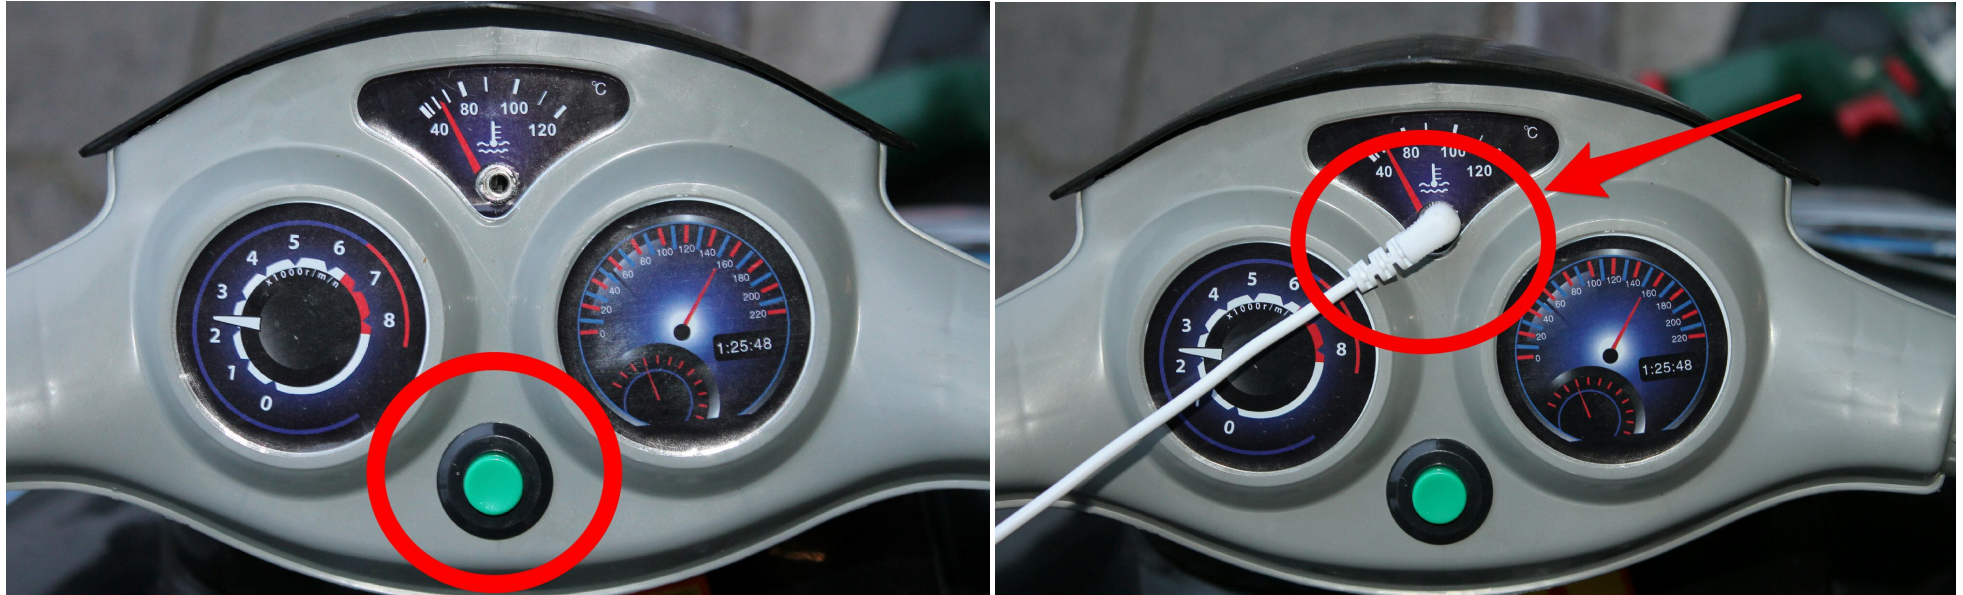

- To use horn please press the highlighted green button
- To use your own playback device, please insert the one end of provided mp3 cable as shown and the other end in headphone jack of your device
- Horn will **NOT WORK** if your playback device is inserted

More info at [www.crooza.de](http://www.crooza.de)